

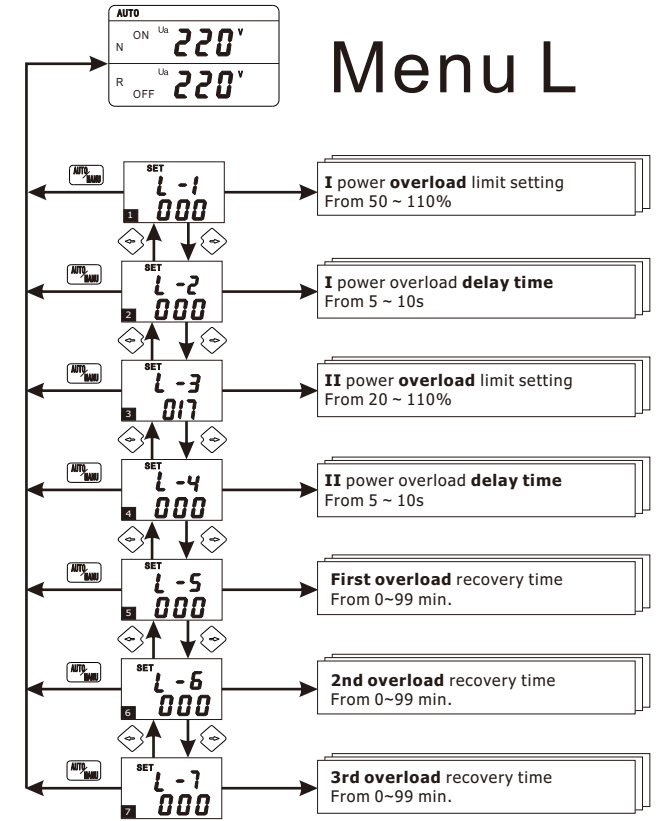
 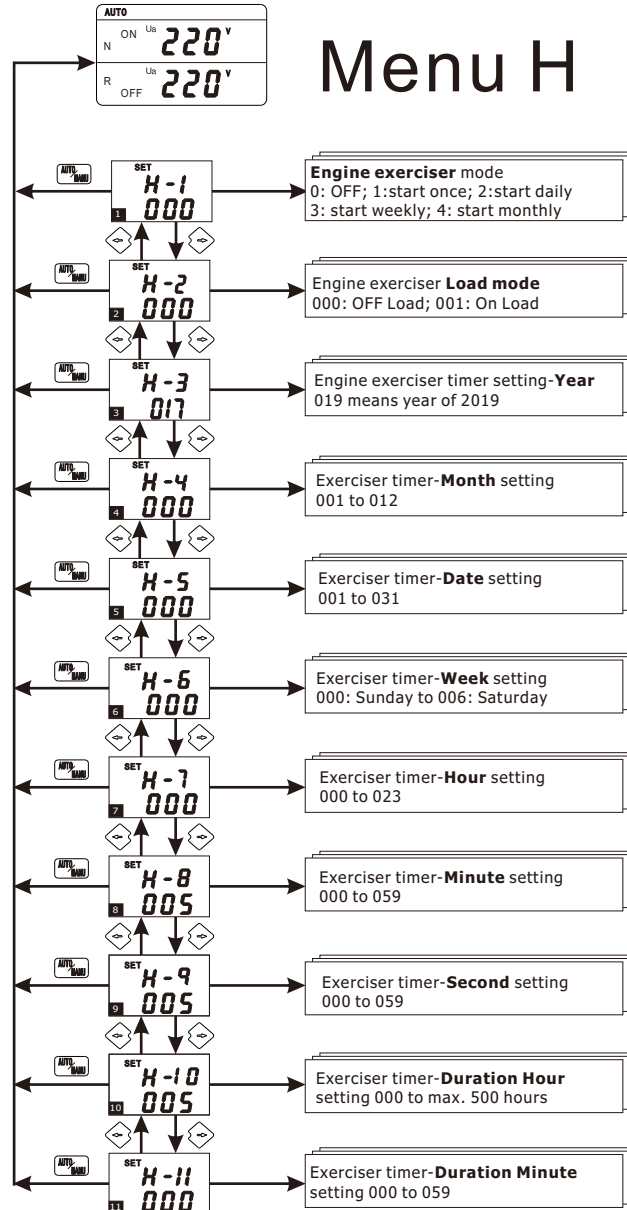


# Menu Instruction

Total three layer menu, menu A, menu H and Menu L  
 Menu A: main menu Menu H: Engine exerciser menu Menu L: Overload menu  
 when enter into setting menu, press "SET" button to shift between three menu

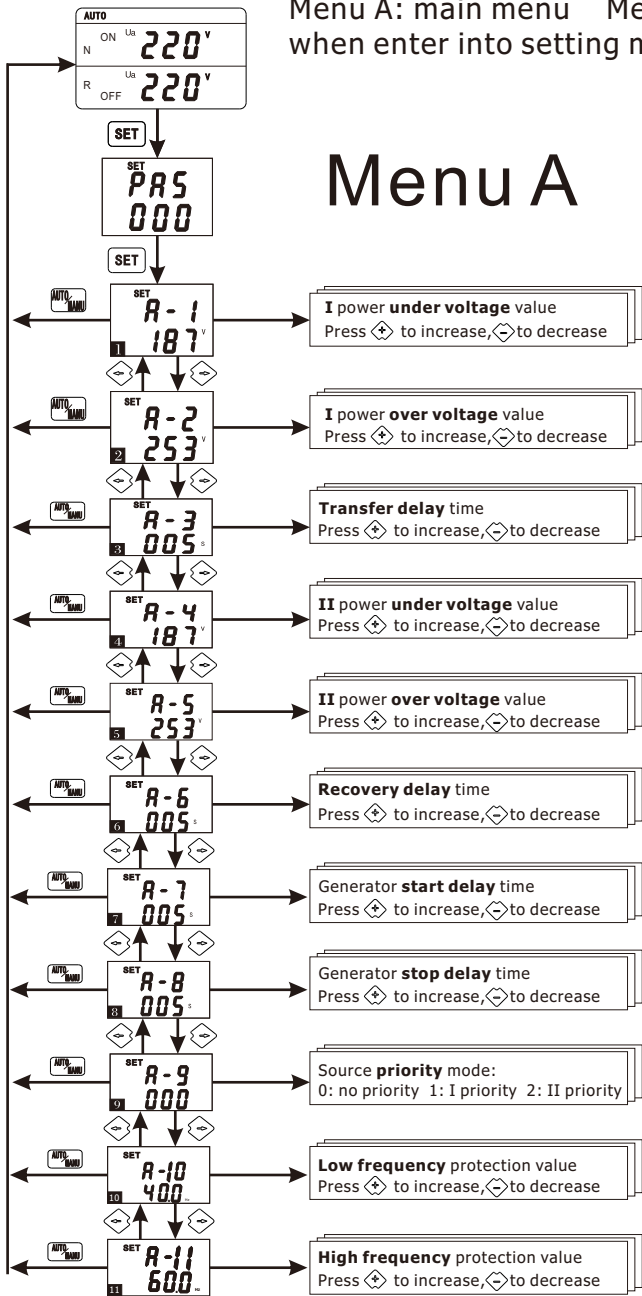

## Button Instruction



During LCD start working, press "SET" and enter password "888", press again "SET", it will enter into Menu A, continuously press "SET" to select the different menu, press "⬆" or "⬇" to page up or page down the setting item, press "⬆" or "⬇" to adjust value.

